INSTALLATION GUIDE

Bifold Hinge Shower Door on the Tray or Floor
Bifold Hinge Shower Door on Bathtub

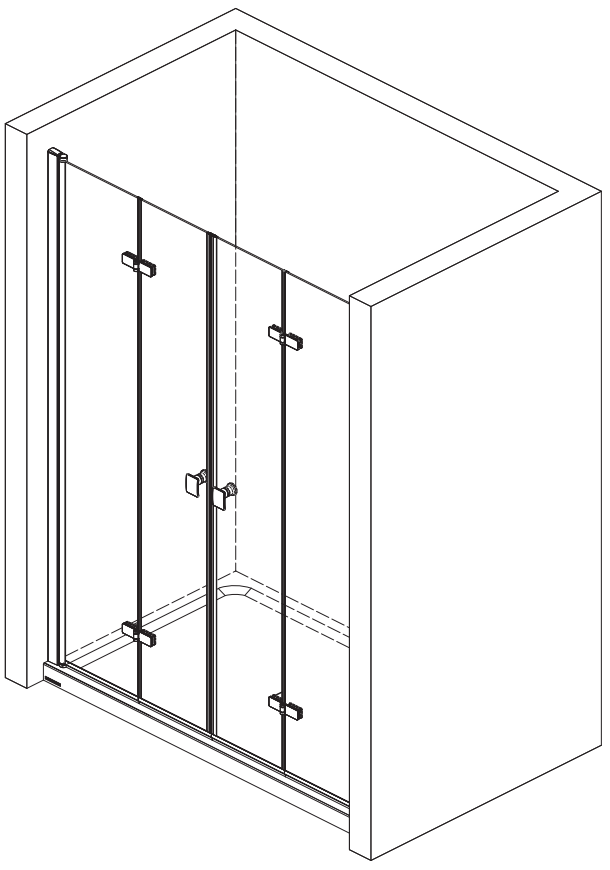

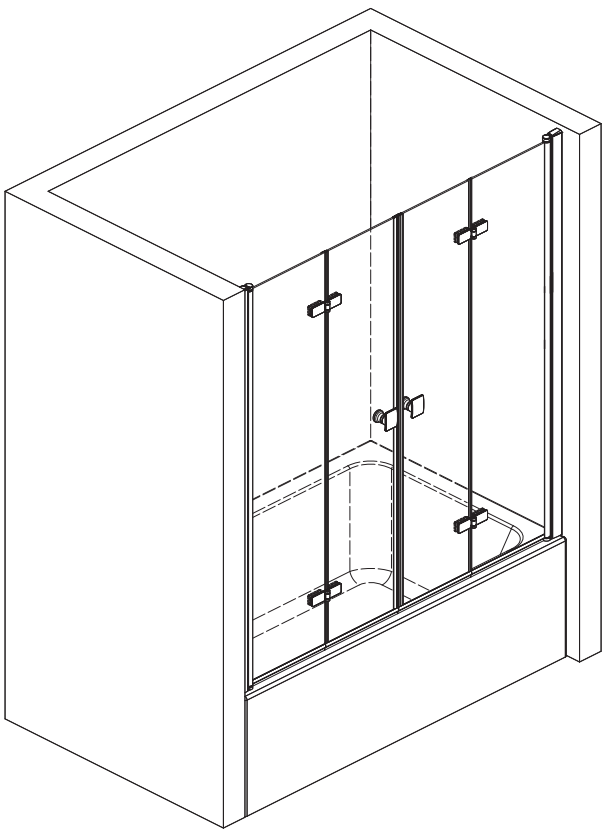

Bifold.pdf 1

12/1/16 5:56 pm

TABLE OF CONTENT

PACKAGE CONTENT.....3-4
PACKAGE CONTENT FRAME.....4
HARDWARE CONTENT.....5
TOOLS REQUIRED.....5
WALL JAMB INSTALLATION.....6
FIXED PANEL INSTALLATION.....7
HINGE INSTALLATION.....8
DOOR PANEL INSTALLATION.....9
SEAL STRIP INSTALLATION.....10
HANDLE INSTALLATION.....11
SEALING.....12

Bifold.pdf 2 12/1/16 5:56 pm

PACKAGE CONTENT

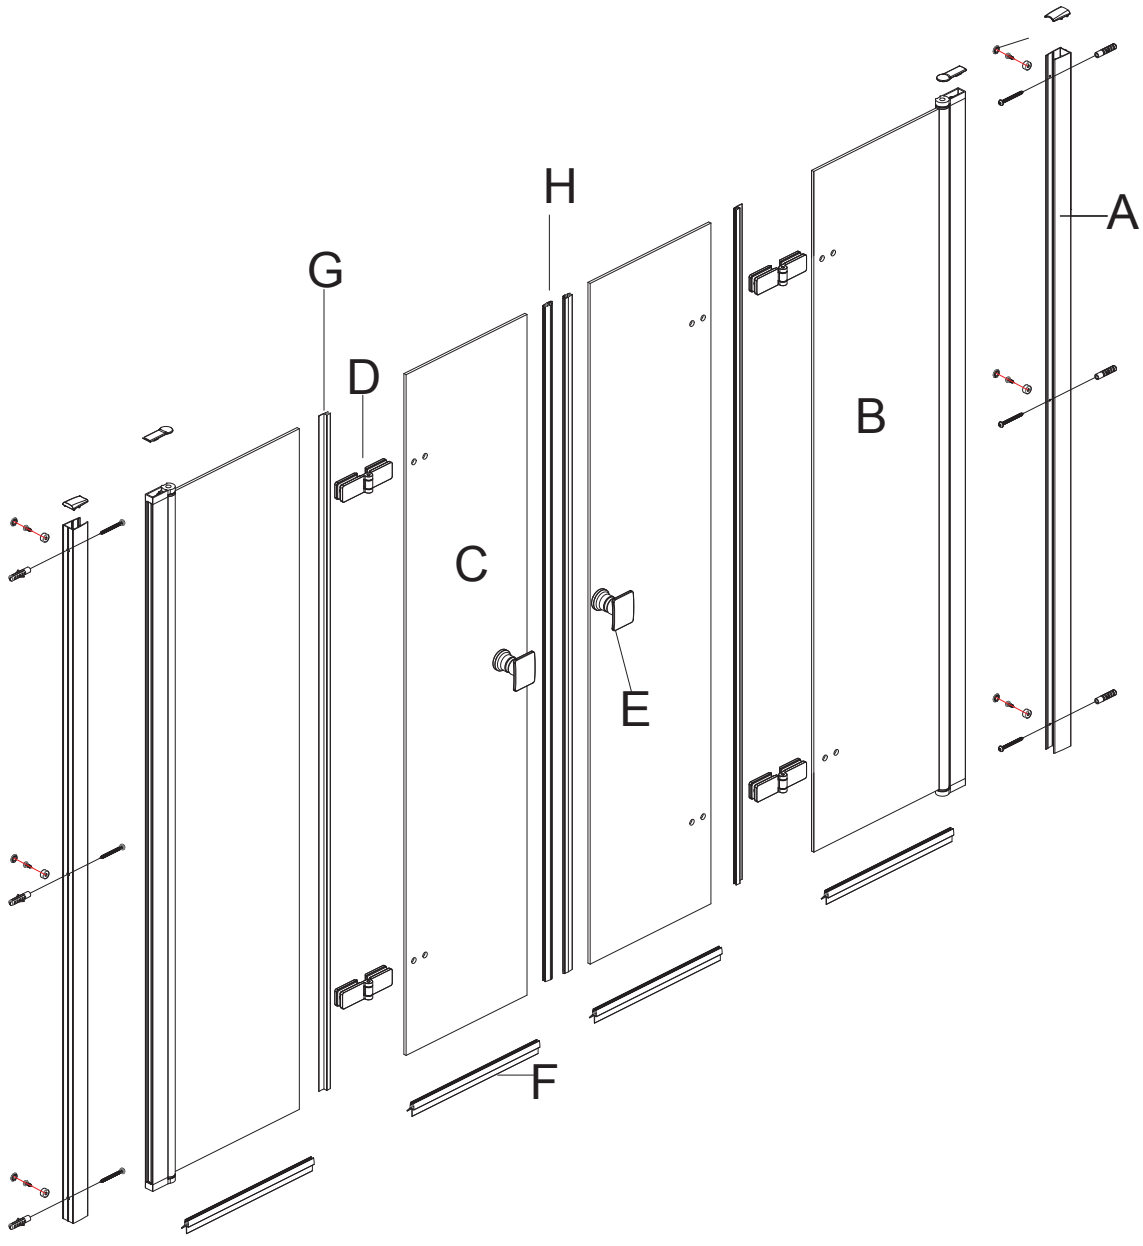

Bifold.pdf 3
12/1/16 5:56 pm

PACKAGE CONTENT

PART#	DESCRIPTION	QTY
A	Wall jamb	2
B	Fixed panel with profile	2
C	Door panel	2
D	Hinge	4
E	Handle	2
F	Door bottom seal strip	4
G	Door panel vertical seal strip	2
H	Magnetic door seal strip	2

PACKAGE CONTENT FRAME

A
x2

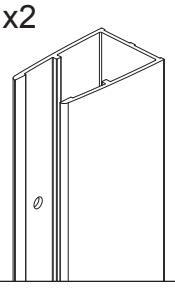

B
x2

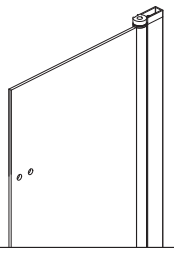

C
x2

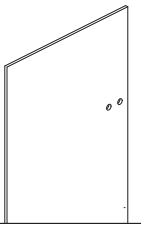

D
x4

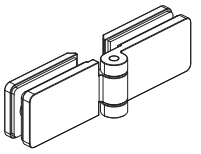

E
x2

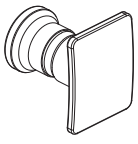

F
x4

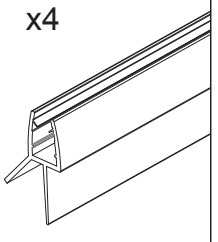

G
x2

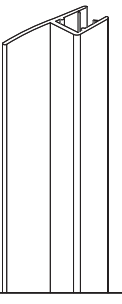

H
x2



Bifold.pdf 4

12/1/16 5:56 pm

HARDWARE CONTENT

AA



Screw
NO.8x1 3/4"
6+2pcs

BB

Screw
NO.8x1/2"
6+2pcs

CC

Wall anchor
Ø8x38mm
6+2pcs

DD



Cap
2pcs

EE



Cap
2pcs

FF

Fitting
6+2pcs

GG

Cap
6+2pcs

TOOLS REQUIRED

Screw driver

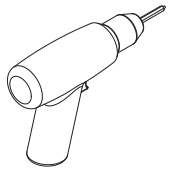

Drill

Drill bit
Φ=5/16"

Drill bit
Φ=1/8"



Rubber
hammer



Measuring
Tape

Allen key
4mm



Knife



Pencil

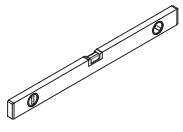

Level

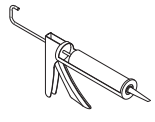

Silicone

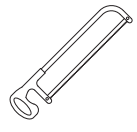

Hacksaw

Bifold.pdf 5

12/1/16 5:56 pm

WALL JAMB INSTALLATION

***Level the tray or bathtub and make sure the installation position is flat.**

1. Place the wall jamb (A) on the wall and keep it level, then mark holes.
2. Remove the wall jamb (A) and use the drill bitΦ5/16" to drill holes.
3. Hammer blow wall anchors (CC) by rubber hammer.
4. Secure the wall jamb (A) with screws (AA) by screw driver.

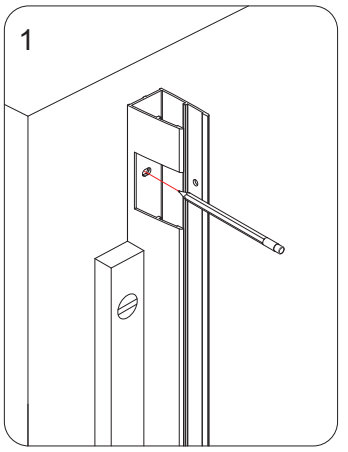

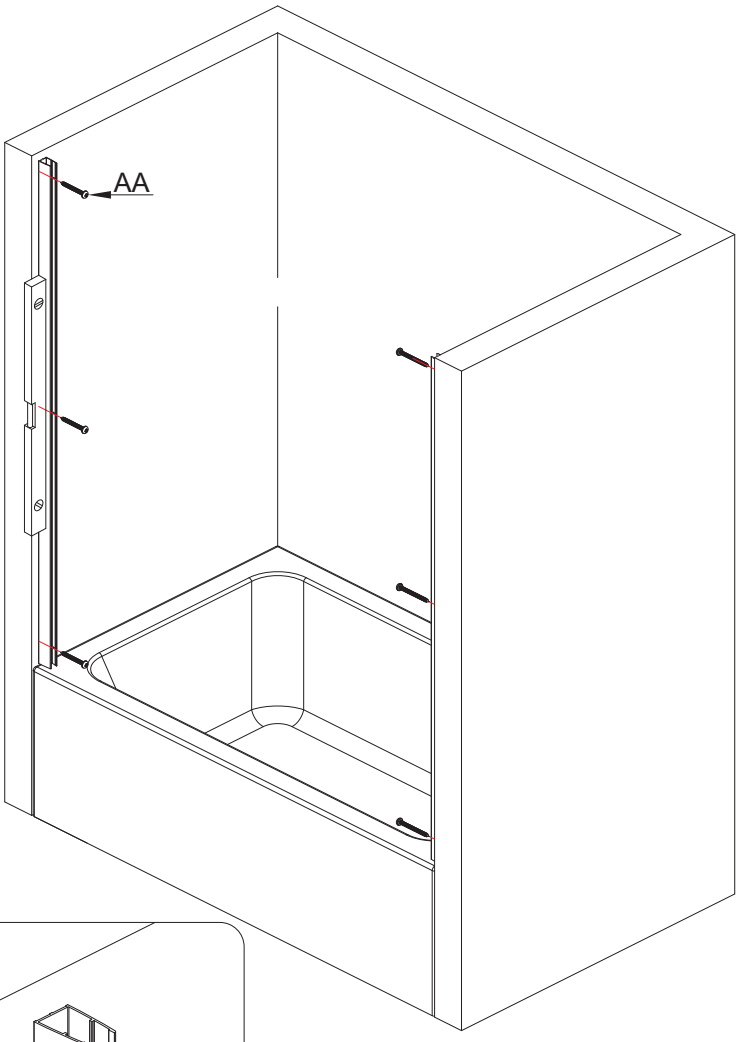

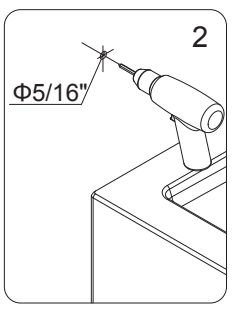

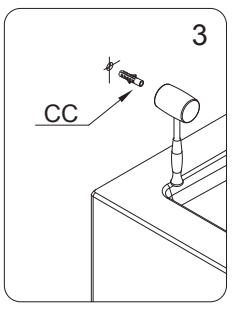

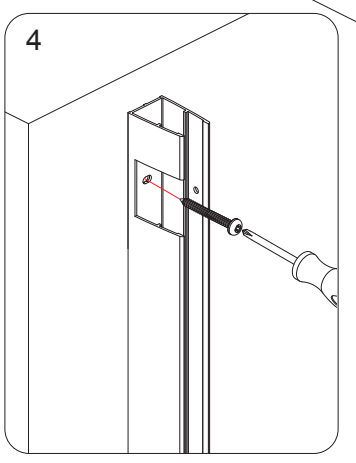

Bifold.pdf 6
12/1/16 5:56 pm

FIXED PANEL INSTALLATION

1. Install the fixed panel (B) to the wall jamb (A).
2. Adjust two fixed panels (B) and measure the width (X) between them, make sure the width (X) as below sheet mentioned.
3. Install the cap (EE) on the aluminum and then install the cap (DD).
4. Drill holes with drill bit Φ1/8".
5. Secure the fitting (FF) and screws (BB) with screw driver.
6. Push the cap (GG) by hand.

Product size	W	H	X
51 1/2"X55	51 1/2"	55 1/2"	23 7/64"
51 1/4"X70"	51 1/4"	70"	23 1/32"
43"X70"	43"	70"	19 "
59"X60"	59"	60"	26 59/64"
59"X76"	59"	76"	26 59/64"

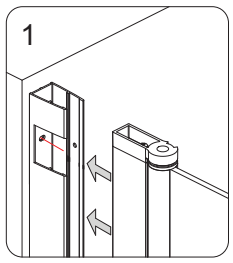

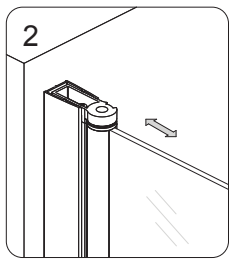

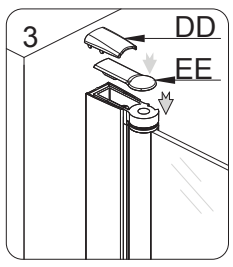

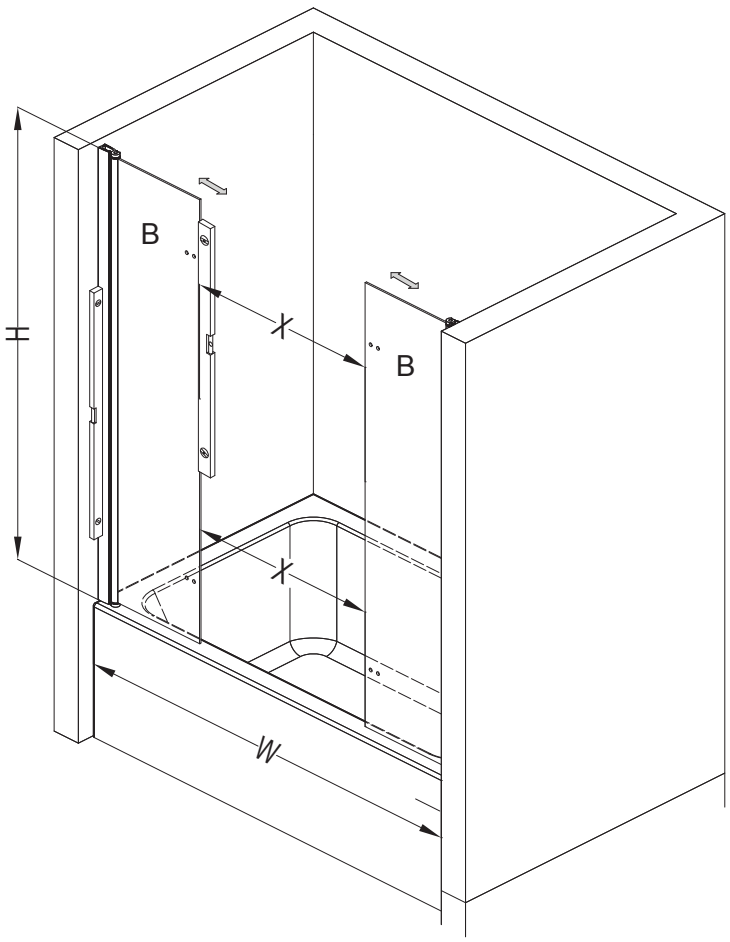

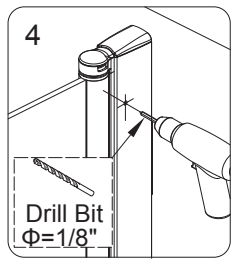

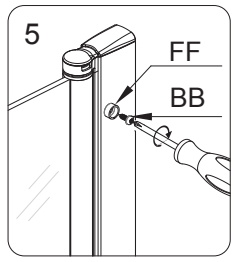

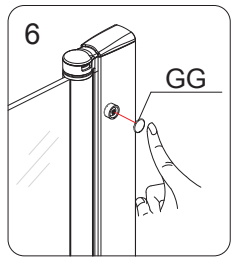

Bifold.pdf 7
12/1/16 5:56 pm

HINGE INSTALLATION

1. Unscrew the hinges (D) with Allen key, then install the hinges (D) to the fixed panel (B).
2. Clockwise tighten the hinges (D) with Allen key.
3. Push the hinge cap by hand.
4. Hinges (D) and the fixed panel (B) install correctly.

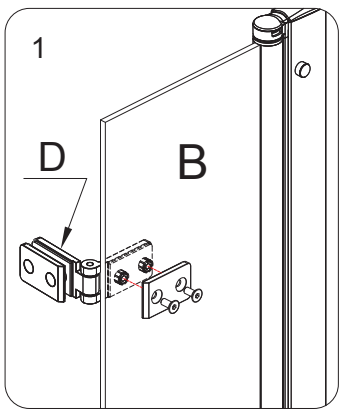

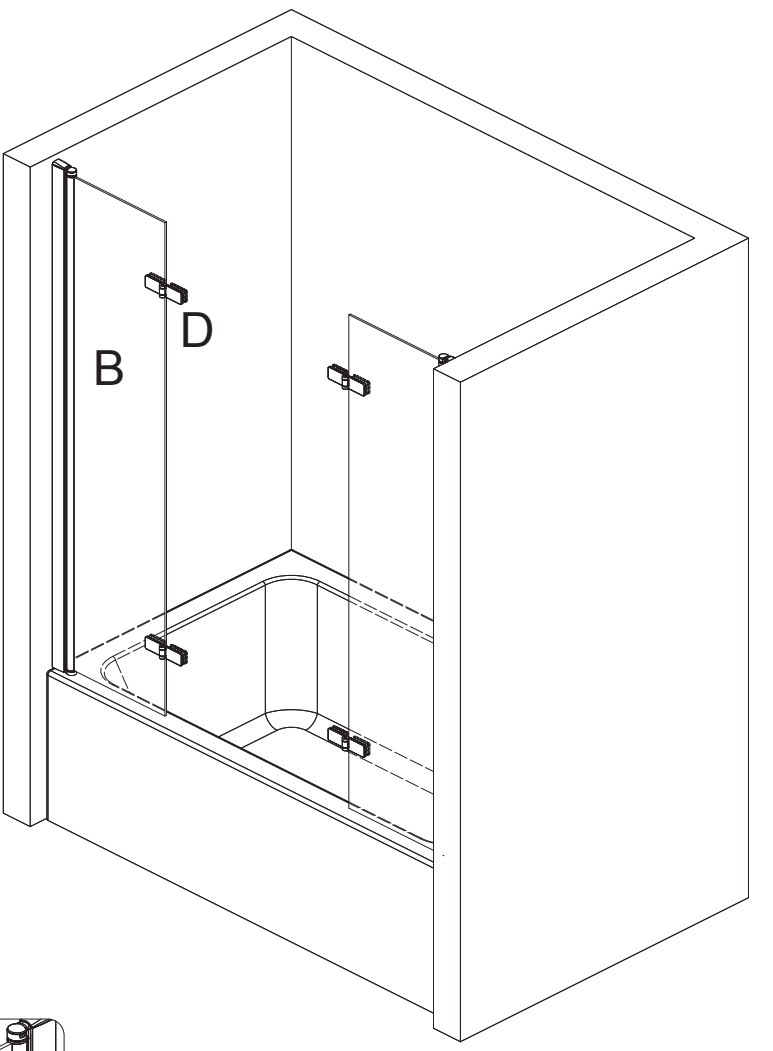

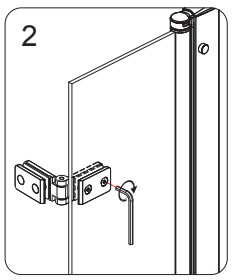

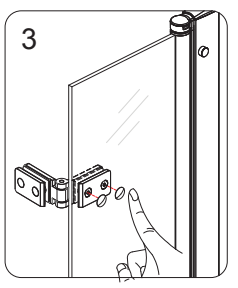

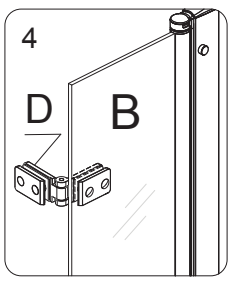

Bifold.pdf 8
12/1/16 5:56 pm

DOOR PANEL INSTALLATION

1. Unscrew the hinges (D) with Allen key, then install the hinges (D) to the door panel (C).
2. Clockwise tighten the hinges (D) with Allen key.
3. Push the hinge cap by hand.
4. Hinges (D) and door panel (C) installed correctly.

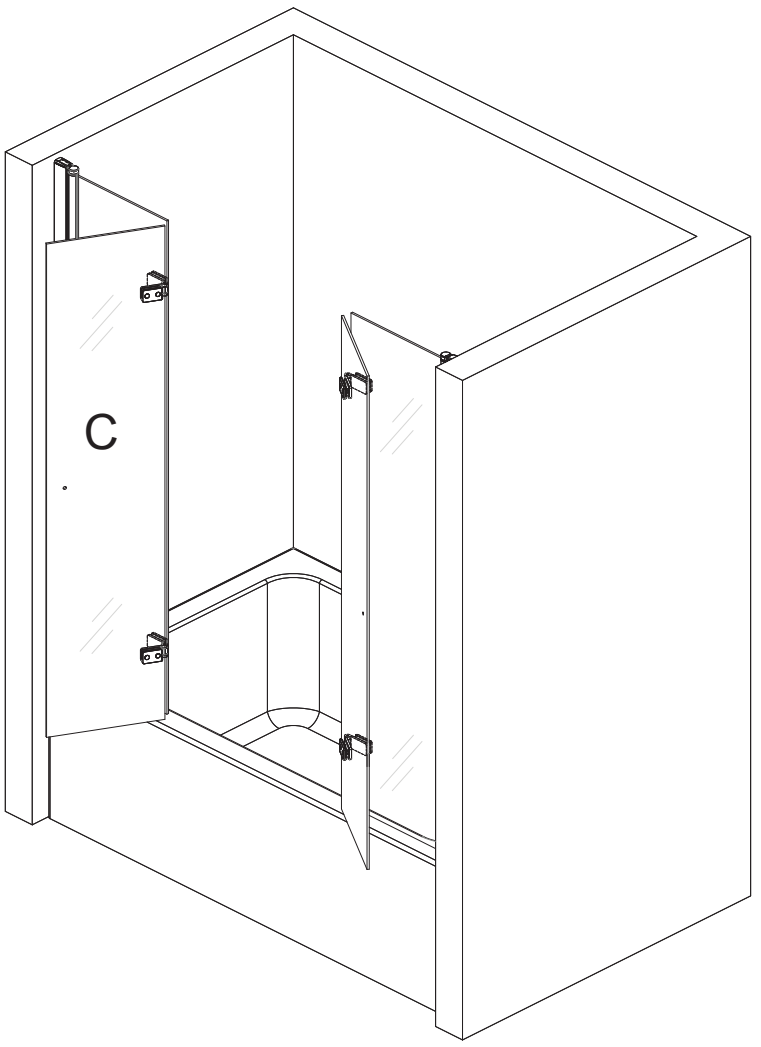

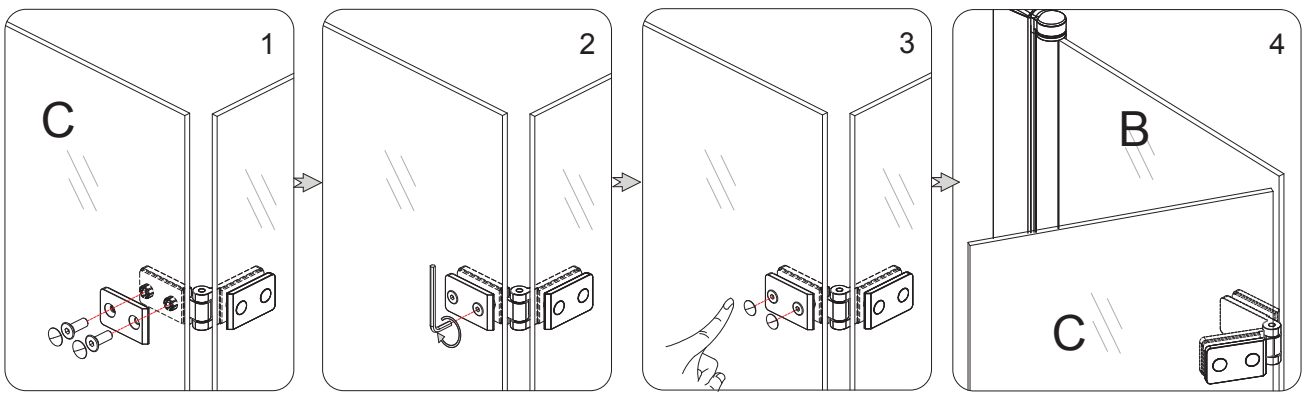

Bifold.pdf 9
12/1/16 5:56 pm

SEAL STRIP INSTALLATION

1. Install the Magnetic door seal strip (H) by hand to the Door panel (C).
2. Install the Door panel vertical seal strip (G) by hand to the Door panel (C).
3-4. Install the Door bottom seal strip (F) by hand to the Door panel (C) and to the Fixed panel (B).
5-6. Door bottom seal strip (F) installed correctly.

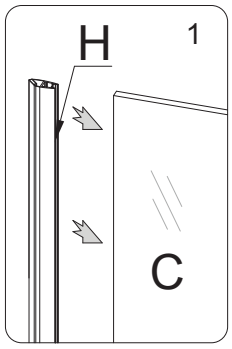

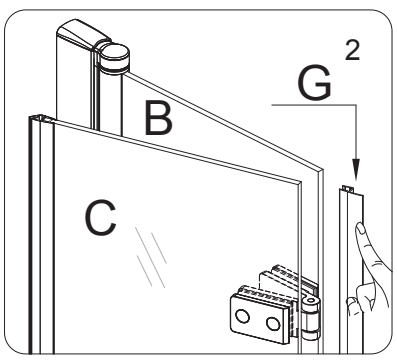

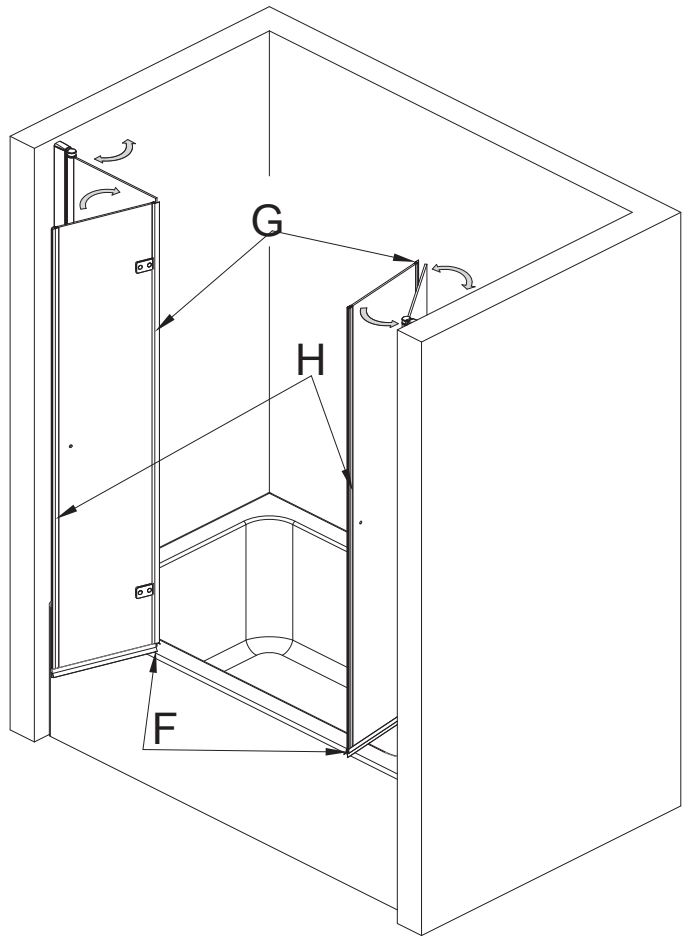

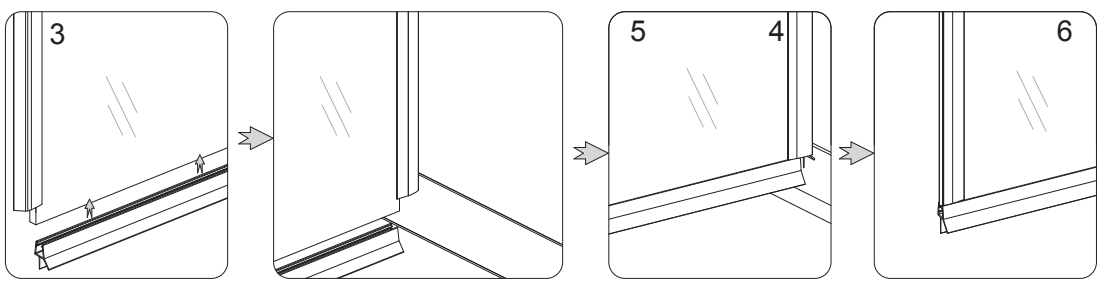

Bifold.pdf 10
12/1/16 5:56 pm

HANDLE INSTALLATION

1. Install the Handle (E) to the Door panel (C).
2. Handle (E) installed correctly.

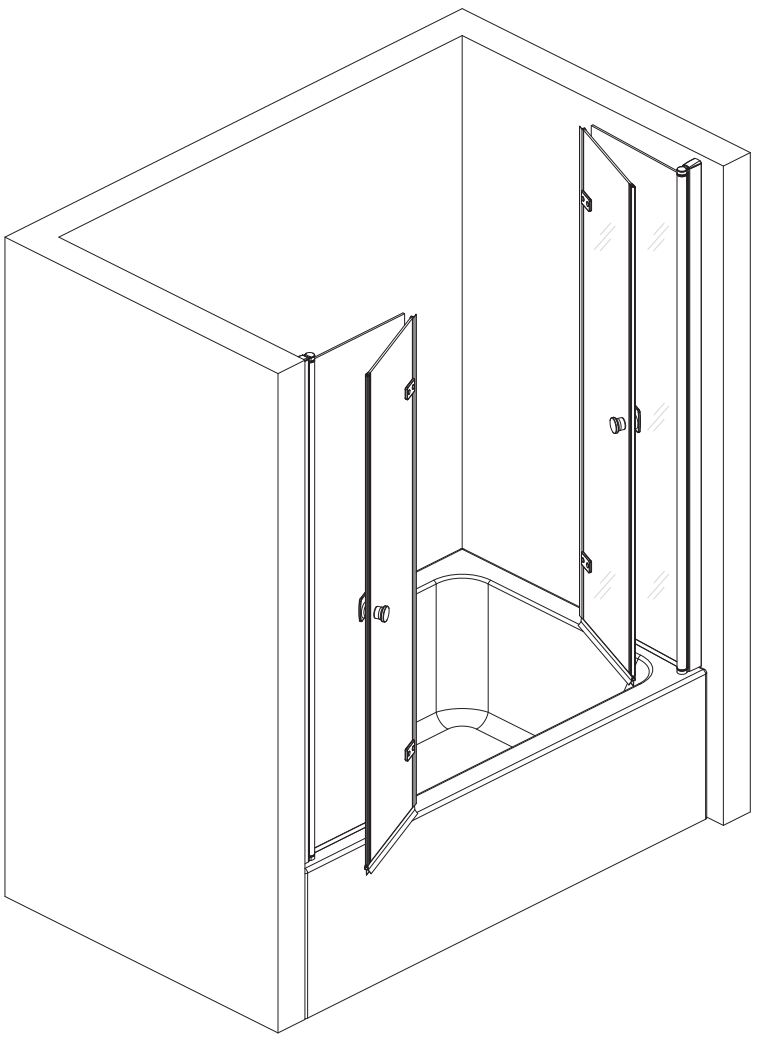

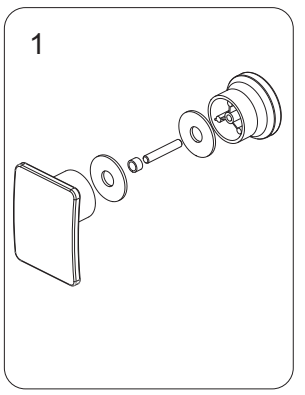

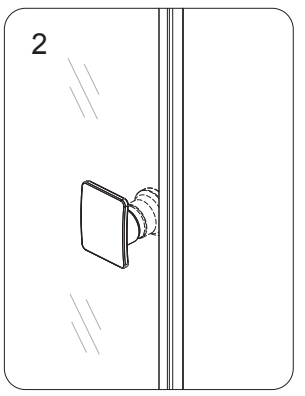

Bifold.pdf 11

12/1/16 5:56 pm

SEALING

The Magnetic door seal strip should be like the tick (√) marked when Shower door closed.

Ensure that the Shower door closes tightly and opens smoothly.
Apply a silicone around the outside of wall jambs to avoid the water leaks.

Allow 24 hours for silicone to dry.

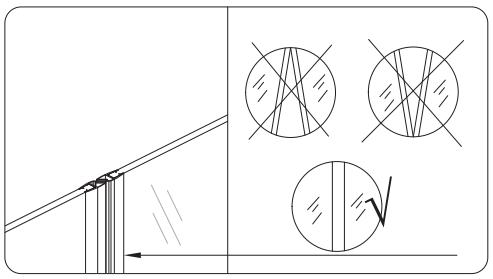

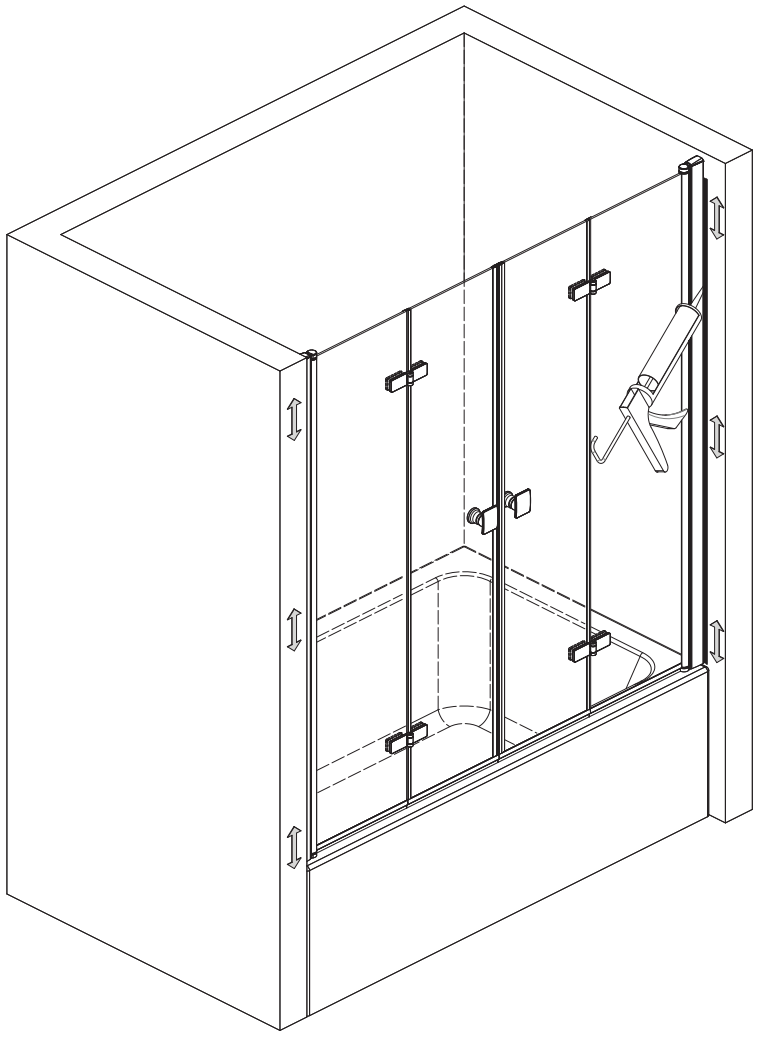

Bifold.pdf 12

12/1/16 5:56 pm